

# CP-131 - Emergency stop switch



**Spare Part Number:** CP-131

**Net Weight:** 0.00kg

**Net Dimensions:** 0.00cm x 0.00cm x 0.00cm

**Technical Datasheet:** [Protected Link](#)

**Manual:** [Protected Link](#)

## Description

### CP-131 Emergency Stop Switch

The Emergency Stop Switch, also known as E-stop switch, emergency switch, kill switch, or emergency button is a fail-safe control switch that provides safety for the system and for the person using the system. The emergency stop switch must be highly visible in color, label ([CP-132](#)) and shape to operate easily in emergency situations. So the button must be red mushroom head with symbol of arrow, EMERGENCY or STOP. It needs a twist to release electrical contacts to allow system restart.

DPST-NC 40mm / HEAD Push-lock turn-reset - A22E-M-02 (use also [CP-132](#))

## Equipment Ref

EVO 3 ELF Ref. **BP1**

EVO 3 EDLF Ref. **BP1**

EVO 3 IP Ref. **BP1** (Front left), **BP2** (Rear Left), **BP3** (Rear Right)

EVO 5 BP Ref. **BP1, BP2, BP3**

EVO 5 BP D Ref. **BP1, BP2, BP3, BP 4**

EVO 5 BP I Ref. **BP1, BP2, BP3, BP 4**

610 Ref **BP1, BP2**

620 Ref **BP1, BP2, BP3**

621 Ref **BP1, BP2, BP3**

830 Ref **BP0, BP1, BP2, BP3**

810 Ref. **BP1, BP2**

812 Ref. **BP1, BP2**

### **Catalogues/Families**

Suitable for the following equipment models:	
CLASSIC 3 P	
CLASSIC 4 P	
EASY TO PLATE EVO 4 IPD	
EASY TO PLATE EVO 4 IPI	
EASY TO PLATE EVO 5 BPD	
EASY TO PLATE EVO 5 BPI	
EASY TO PLATE EVO 5 IPD	
EASY TO PLATE EVO 5 IPI	

EVO 2 A	
EVO 3 A	
EVO 3 EDLF	
EVO 3 ELF	
EVO 4 D	
EVO 4 DLF	
EVO 4 E	
EVO 4 EDLF	
EVO 4 ELF	
EVO 4 IP	
EVO 4 LF	
EVO 5 BP	
EVO 5 D	
EVO 5 DLF	
EVO 5 E	
EVO 5 ELF	
EVO 5 IP	
EVO 5 LF	
Spare Part Type	
Electrical Component	
Spare Part Group	
Others	
Stock Type	
Standard Stock	

## Product Gallery

